



ASSEMBLY INSTRUCTIONS

60620-MHM

Step 1

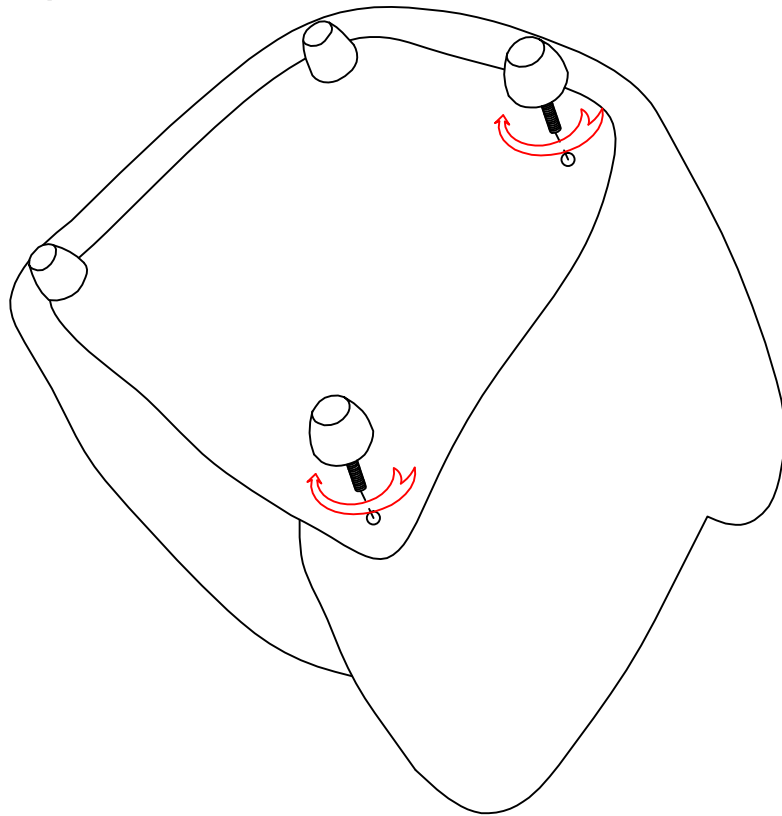

Finish

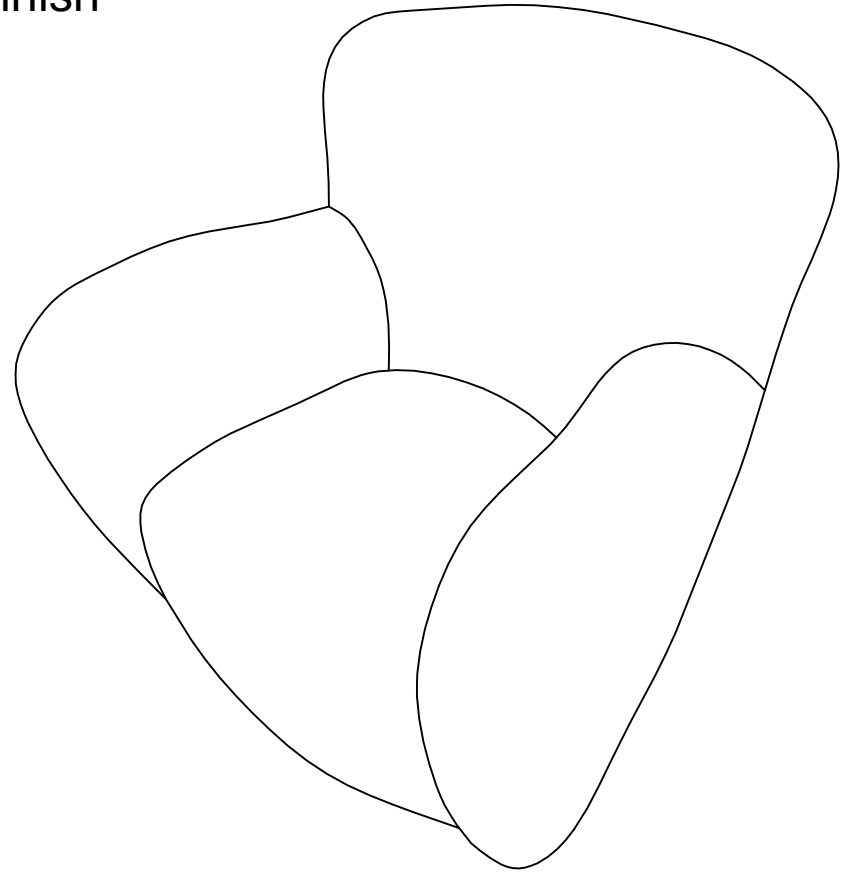

Please leave bolts loosened until all bolts
are placed before tightening completely