



ASSEMBLY INSTRUCTIONS

85801-XXX

Step 1

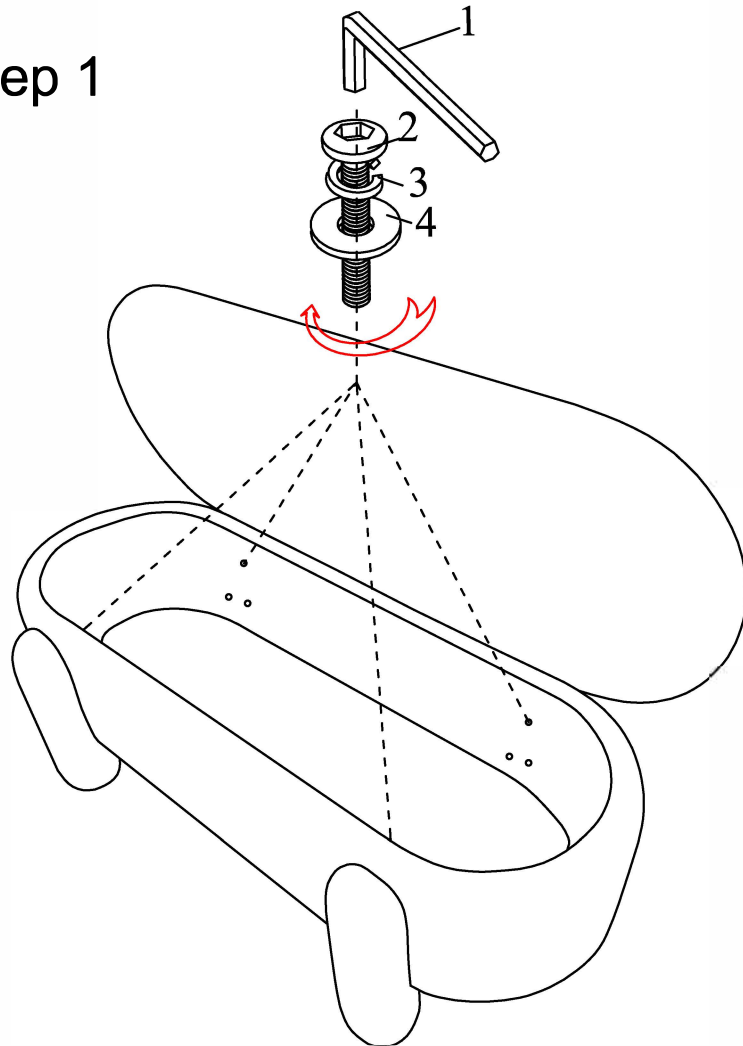

Finish

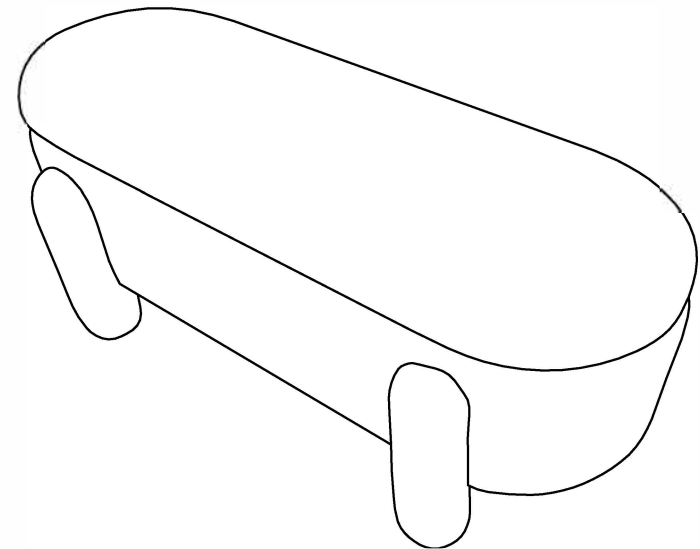

Please leave bolts loosened until all bolts are placed before tightening completely

Hardware

1		"L" Wrench	1pc
2		Bolt 8*55mm	12pcs
3		Spring Washer	12pcs
4		Flat Washer	12pcs